

H314 Smart Hot Air Gun User Manual



Please read this manual carefully before use

1 Product Features

- Heating core with 1400W rated power, rapid heating up; smart as usual, with higher air speed and greater power
- 3.5 inch IPS HD display screen, built-in with smart operation system
- Built-in with fingerprint function, support fingerprint recognition and automatic switch of multiple accounts
- Bluetooth WiFi interconnection, more stable through OTA upgrade; support AI smart voice central control
- Heating core with 1400W rated power, heating up to 380°C in 3 seconds under top speed mode
- Soft, standard, top speed modes and design of 9 channels, switch 5 sets of accounts by fingerprint, maximum 45 sets can be saved
- Dual combination of segment and curve desoldering, saving of exclusive user's private Cloud data, support the upgrade of various APPs
- Air nozzle adopts patent design of spring lock, solving the problem that air nozzle swapping might be stuck under high temperature
- Adopt patent design of 3D air nozzle, combining with self-designed temp control algorithm and the design of all-in-one air channel

2 Structures Instruction

Front side



Accessories



Power cord



Air nozzle (smooth wind) *4



Air nozzle placing rack



Standby holder



Hex key



Certificate *1




User manual card *1

3 Product Parameters

Product name: Smart Hot Air Gun	Temp range: 100-500°C
Model: H314	Display screen: 3.5inch IPS
Rated power: 1400W	Input voltage: 230V~ 50Hz
Communication: Type-C / WIFI / Bluetooth	Air flow gear: 1%-150%
Blowing type: Smooth wind/Spiral wind	Air flow: 15-50m/s

4 Product Operation


● Introduction of main interface

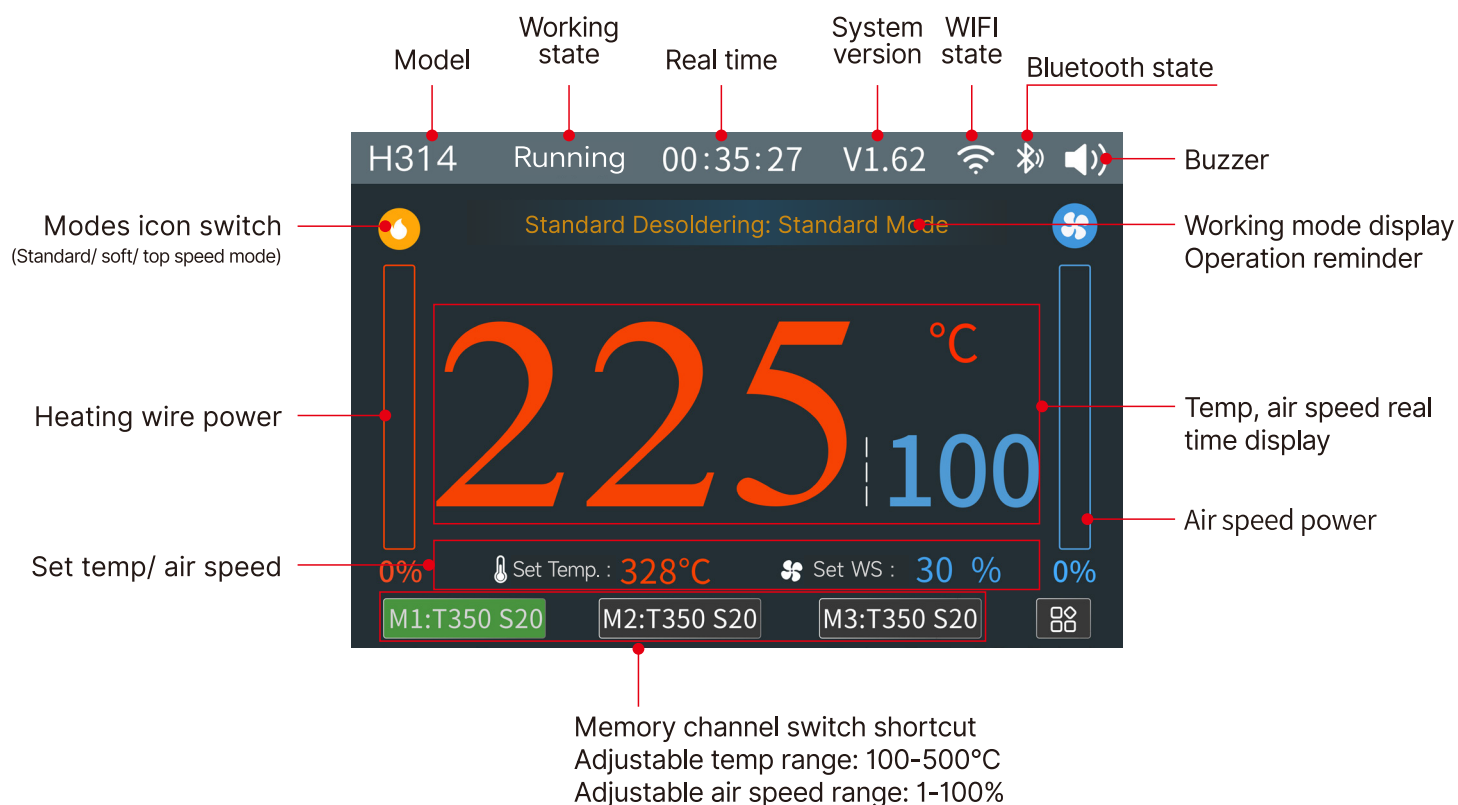

● Curve interface


1. Normal desoldering system curve

- Press “SET” button to enter the curve interface
- Rotate “Temperature knob” to adjust the set temperature
Rotate “Air speed knob” to adjust the set air speed
- Press “M1, M2 and M3 buttons to switch memory shortcut channel
- Press “SET” button to exit and back to the main interface

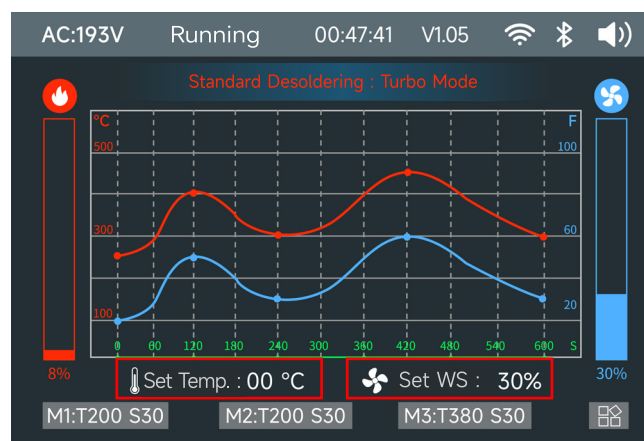


2. Curve desoldering system


- Press “SET” button to enter the curve interface
- Press “Air speed knob” to switch to curve **desoldering system**
(There are five inflection points, users can set the starting point of the curve desoldering at will)
- Rotate the “Air speed knob” to select any inflection point
Press the “Temperature knob” to set the starting point of the curve desoldering
- Press the “M1, M2, M3” buttons to view the values of the shortcuts
- Press the “SET” button to exit and back to the main interface

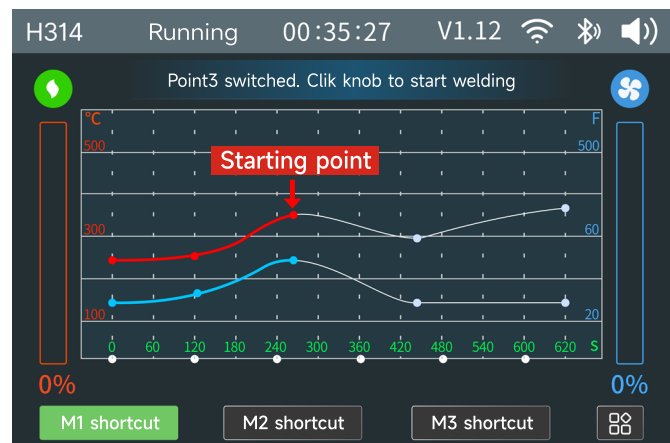


Value settings of curve desoldering

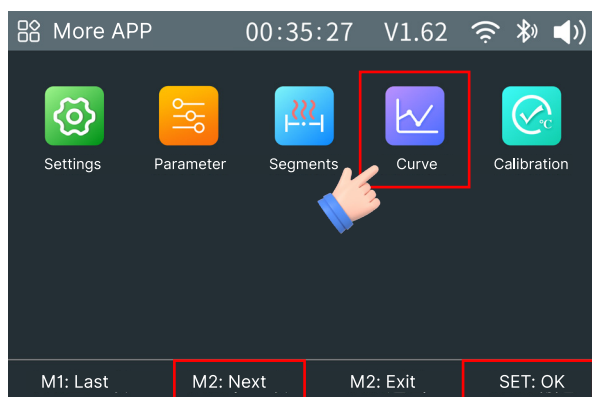

- Long press the “SET” button to enter the expanded applications interface
- Press the “M2 button” to switch to the curve desoldering interface; Press the “STE button” to enter the curve desoldering interface

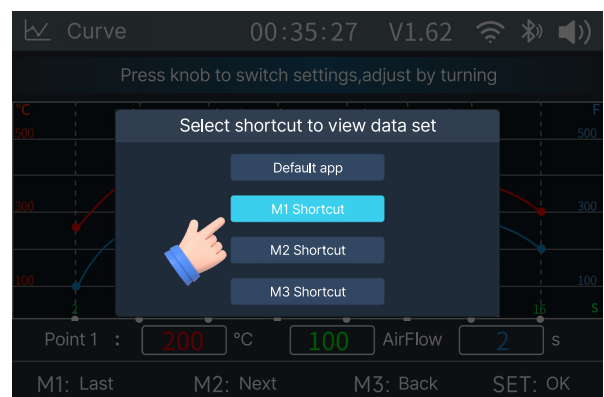

- Users can select “default shortcut, M1 shortcut, M2 shortcut and M3 shortcut” at will
Users can set values of M1/M2/M3 shortcuts
(Each shortcut has five inflection point values to be set)

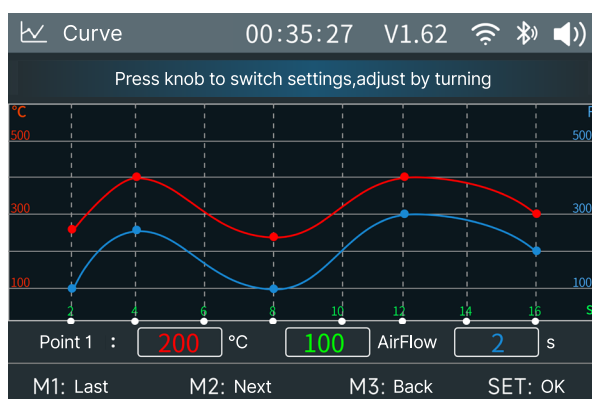


Temperature knob

Air speed knob


- The “temperature, air speed and time” of each inflection point can be set; press “M1 (last line) or M2 (next line)” to switch among each inflection point
- Press the “air speed knob/temperature knob” to switch the “temperature, air speed and time” of each inflection point
Rotate the “air speed knob/temperature knob” to adjust the “temperature”, “air speed” or “time”
- After setting, long press the “SET” button to save the data, or long press “M1-M3” to save the value to the shortcut channel; Press the “SET” button to exit and back to the main interface

3. Segment desoldering


- Press the “STE” button to enter the curve interface
- Press “Air speed knob” to switch to **segment desoldering system**
- Press the “M1, M2, M3” buttons to view the values of the shortcuts
- Pick up the handle to start working
- Press “Set” button to exit and back to the main interface

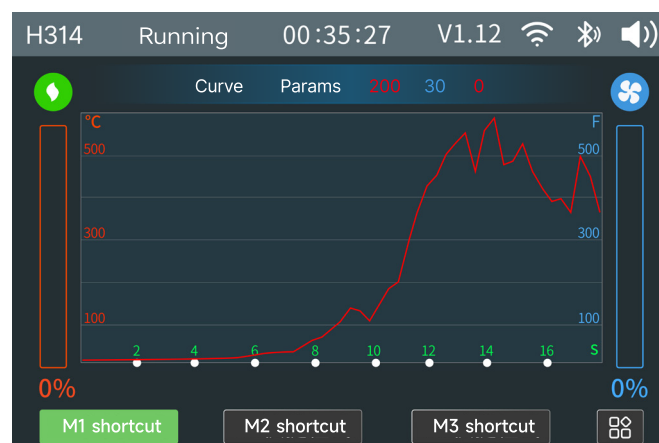


Value settings of segment desoldering

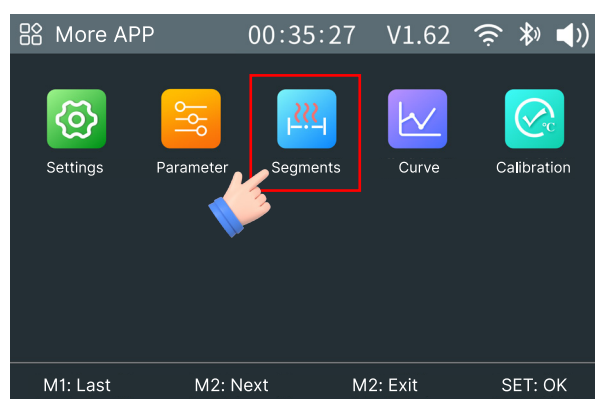

- Long press the “SET” button to enter the expanded applications interface
- Press the “M2 button” to switch to the segment **desoldering interface**;
Press the “STE button” to enter the segment **desoldering interface**

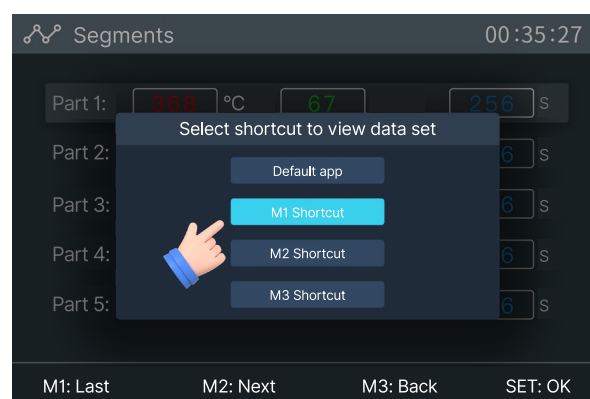

- Rotate “Air speed knob” to select “default shortcut, M1 shortcut, M2 shortcut and M3 shortcut” at will
Each shortcut has five segments of values that can be set

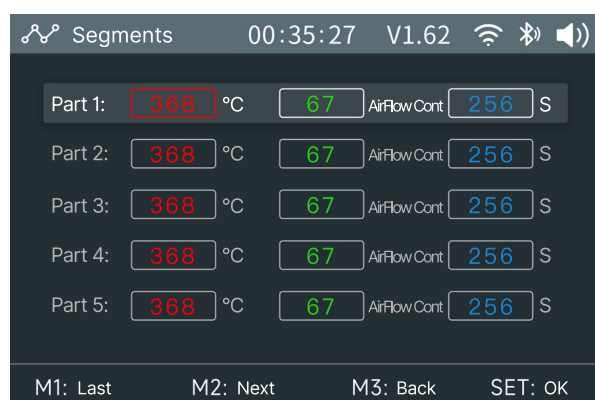

- The “temperature, air speed and time” of each segment can be set
Press “M1 (last line) or M2 (next line)” to switch among each segment
- Press the “air speed knob/temperature knob” to switch the “temperature, air speed and time” of segment 1/ 2/ 3/ 4/ 5
Rotate the “air speed knob/temperature knob” to adjust the “temperature”, “air speed” or “time”
- After setting, long press the “SET” button to save the data, or long press “M1-M3” to save the value to the shortcut channel;
- Press the “SET” button to exit and back to the main interface


Note:

Segment is selected: there is a color block at the bottom

“Temperature/ air flow/ time” is selected: the selected bar will flash


● Desoldering parameters

- * Long press the “SET” button to enter the expanded applications interface
- * Press “M2 (next)” and select “desoldering parameters” interface
- * Press the “SET” button to enter the interface
- Press “M1 (last) or M2 (next)” to switch the desoldering parameters of “remove CPU without glue, install CPU, remove Android Nand, iPhone glue removing, remove motherboard socket”, etc.
- Long press the “M1, M2, M3” buttons to save the selected parameters to the shortcut channels of different modes
- Press “Set” button to exit and back to the main interface. You can directly call the shortcut channel in the operation interface

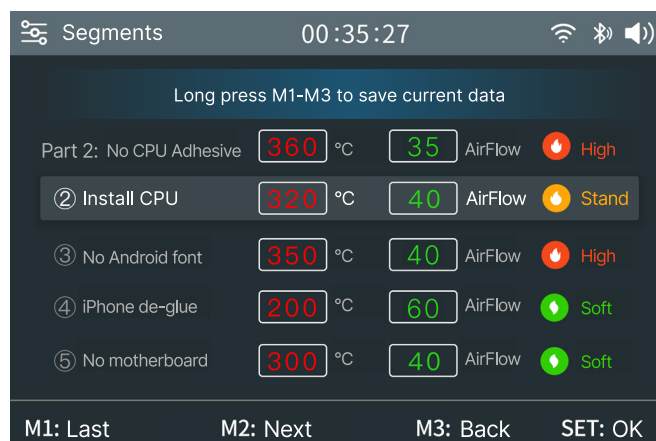

● System settings

- Long press the “SET” button to enter the expanded applications interface, select on the “Settings” icon
- Press “SET” to enter this interface
- Users can adjust the corresponding parameters according to their needs, press “M1 (last) or M2 (next)” to switch the parameters of “Language, sounds, standby air speed, WIFI, fingerprint, theme, device info, update and restore”
- Select the parameters to be set, press the “SET” button to enter the setting interface

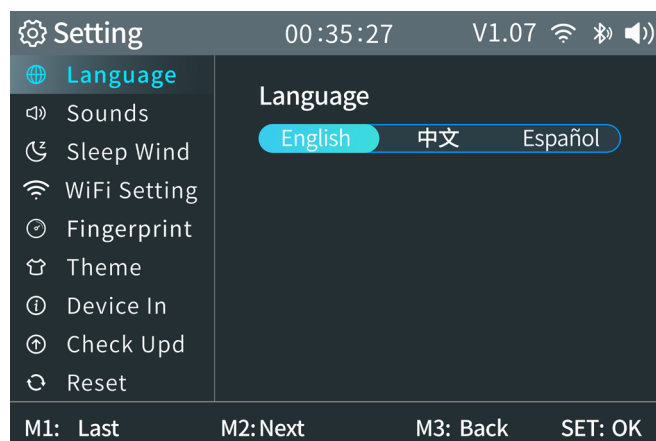

(For example: If you need switch language, select on the language, press the “SET” button to enter this interface, then press “SET” again to set the needed language, after setting, press “M3” to go back)

5 Online Upgrade/ WIFI OTA Upgrade

WIFI setting

- Connect the device with WiFi through mobile phone (only support 2.4G WIFI network configuration so far)

Method 1: Configure network through AiXun official account

- Follow [AiXUN] official account on WeChat or scan the QR code → Find [AiXUN Assistant] in “Product Information” or scan the QR code on the “WIFI Setting” interface
- Save mobile phone WiFi as connected state and Bluetooth as ON
- Find your device code, click Connect, enter the password > Confirm to send, and wait for the connection to complete
Check device code: Check the device name and other information in “Device Info” in Settings



Method 2: Configure network through WeChat mini program

- When the device is connected to WIFI for the first time, please use the “AiXun Assistant” on WeChat mini program

- Enter the “AiXun Assistant” mini program

Option 1: Scan the QR code below to enter the AiXun Assistant mini program

Option 2: Search the “AiXun Assistant” mini program on WeChat

Option 3: Connect through “AiXun Platform”. Click the “WIFI” icon on the upgrade interface of H314, then a “WeChat mini program QR code” will appear

- Find the corresponding device

Enter the “AiXun Assistant” mini program, you will see the device list, find the corresponding product model, and click “Connect”]

(Allow to use when the Bluetooth is turned on or when the Bluetooth requests to use mini program. When there are several H314 at the same time, check the machine code in device information and then connect accordingly)


Check device code: Check the device name and other information in “Device Info” in Settings

- Connect successfully


Wait for connection. After the first successful connection, there is no need to connect again for the second time. The device will connect with WIFI automatically next time




Scan the QR code on WeChat

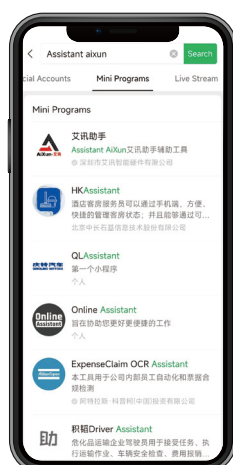


Search “AiXun Assistant” mini program on WeChat

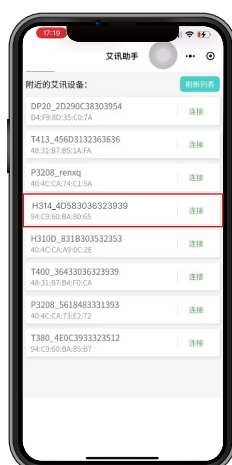

● WIFI/Bluetooth connection states

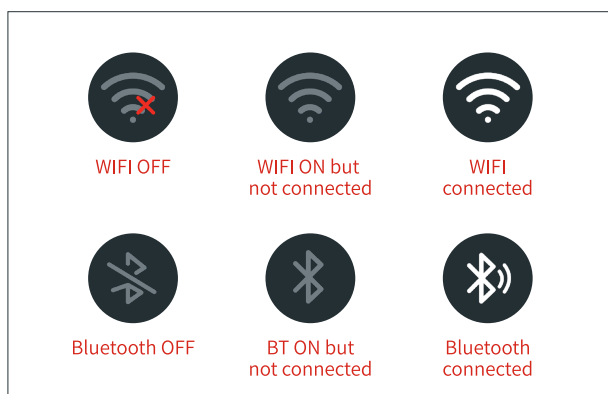

Dark mode

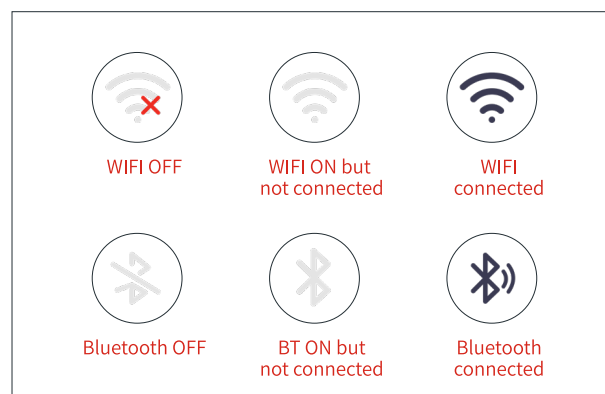

Light mode

II Software upgrade

Method 1: WIFI networking and upgrade software via OTA

- According to the WIFI settings and connection method, after connect the device with WIFI, the software can be upgraded to the latest version on the device, no data cable is required

Method 2: Connect to the computer via Type-C data cable to upgrade

- A Type-C data cable interface is reserved on the device which can be connected to a computer. Open [AiXun Platform], it will identify the connected device automatically
- Select the latest software version to upgrade, and wait until the upgrade is complete




6 Fingerprint Setting


- Long press the “SET” button to enter the expanded applications interface, select on the “Settings” icon
Press “SET” to enter this interface
- Press “M1 (last) or M2 (next)” to select on “Fingerprint”
Press “Set” button again to enter the fingerprint users interface
- Press the “SET or Air Speed Knob or Temperature Knob” button to turn on/off the fingerprint password;



Add fingerprint

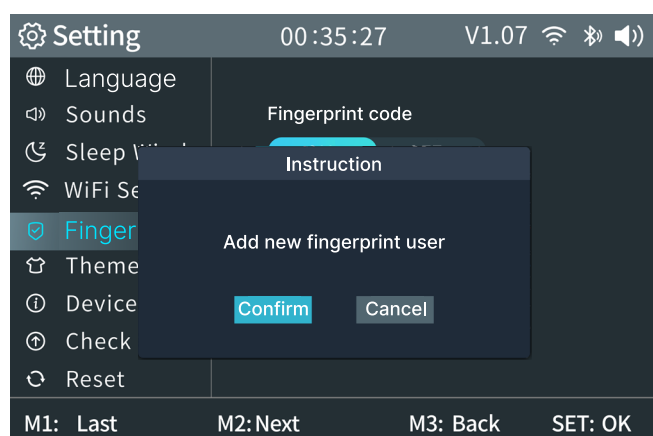

- Press “M1 (last) or M2 (next)” to select “Add fingerprint”;
Then press the “SET” button to confirm adding fingerprint

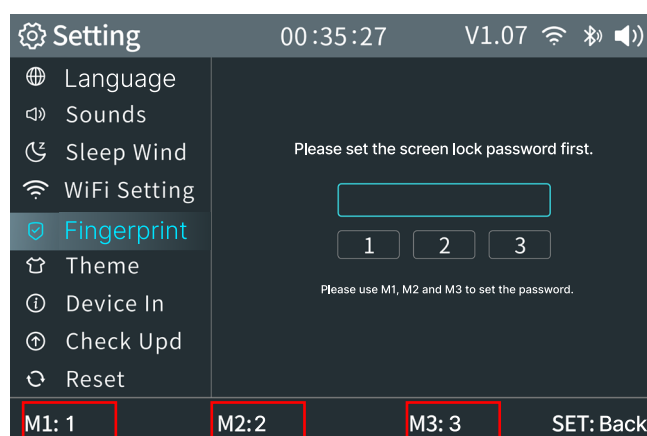


- Users need to set a lock screen password, please use M1, M2, M3 to set the password




- After setting the lock screen password, press the fingerprint, and after the fingerprint is fully filled in, press “SET” button to confirm. After setting, press the “M3” button to go back


7 Air Nozzles Replacement

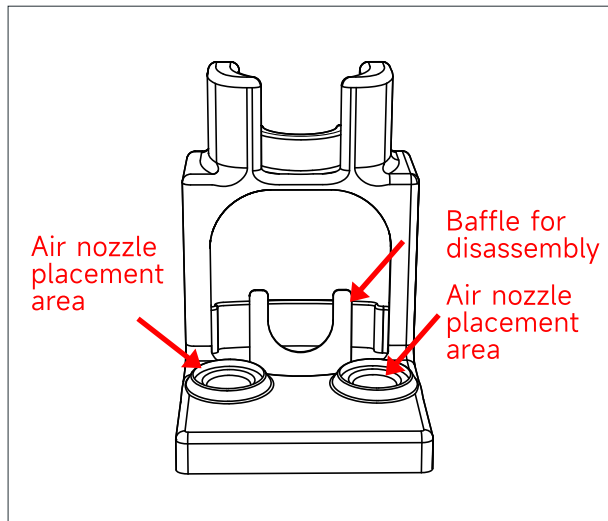


- Users can place the air nozzle in the “air nozzle placement area”, convenient and neat, replace quickly

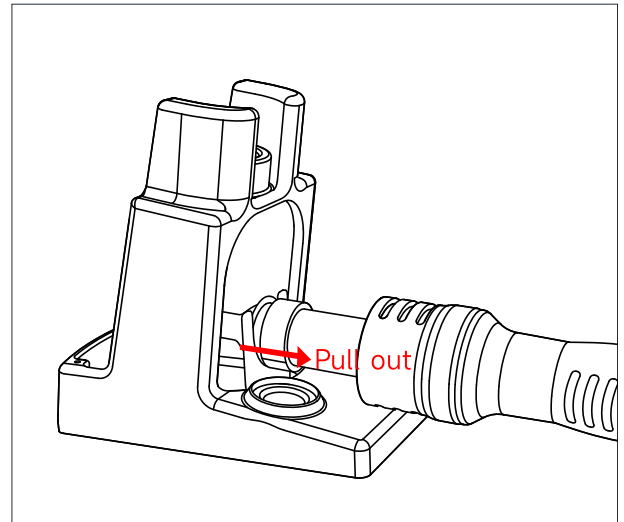

- Place the handle of the air gun on the “baffle for disassembly” and slowly pull out the air nozzle in use. Do not operate with hands to prevent burns.

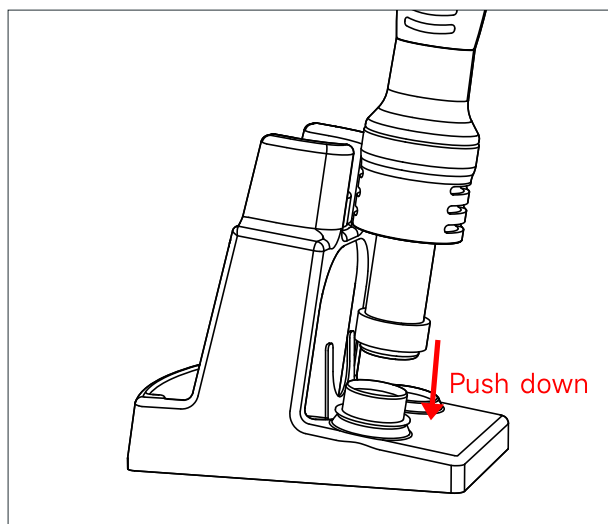

- Place the air nozzle in the “air nozzle placement area” and push the handle of the air gun down to install the air nozzle quickly

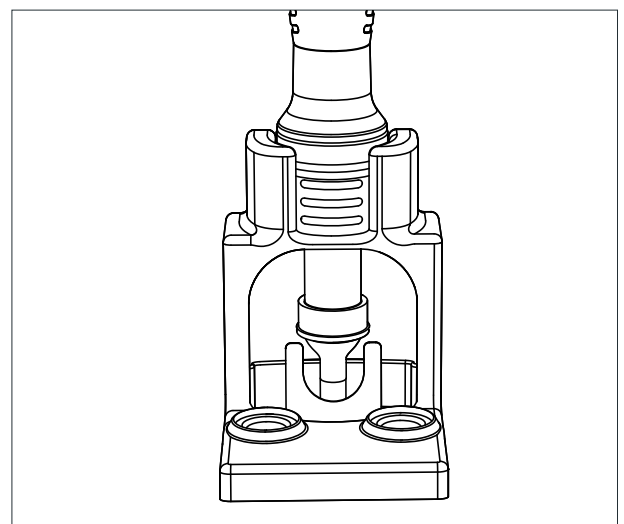

- Effect after installation, simple and convenient

● Simple and convenient operation, easy to learn

8 Precautions

● To avoid damage to the hot air gun and consider safety of the working environment, the following matters shall be observed:

- The product uses a three wire grounding plug, which must be inserted in a three hole grounding socket. Do not change the plug or use an ungrounded three plug adaptor to avoid poor grounding. To lengthen the wire, please use a grounded three wire power cord.
- Built-in precision electronics, non-professionals please do not disassemble without authorization.
- Please adjust strictly according to the official parameters. Do not exceed the value range to prevent product damage and malfunction.
- The hot air gun should not be used by children or untrained personnel; do not use the station as a hair dryer
- Please do not mix metal flakes and wire debris into this product, otherwise it may cause electric shock, fire, or failure.
- Replace fittings with original accessories.
- If it is in idle for a long time, please place it in a dry environment.
- Do not get the hot air gun wet, or do not touch the hot air gun with wet hands nor pull the power cord.
- Please strictly follow this manual when using.

 This product has anti-static measures, please be sure to use grounding.

9 After Sale Service

● Warranty regulations:

- The product is guaranteed for one year from the date of purchase (subject to the purchase certificate).
- The warranty service is only valid under normal use. All man-made damage, such as improper use of accessories, failure to use according to instructions, damage not caused by our company's repair, wrong use or negligence, the warranty service will immediately invalid.
- The company has the final right to interpret the above regulations for users who do not comply with the above regulations.

AiXun

Phone: (+86) 400-875-9688

Website: www.aixun.com

Address: Room 402(403), 4th Floor, Building 2,
IOT Industrial Park, 4012 Wuhe Blvd, Bantian
Street, Longgang District, Shenzhen

服务热线: 400-875-9688

品牌官网: www.aixun.com

地址: 深圳市龙岗区坂田街道五和大道4012号
IOT物联网产业园2栋4楼402(403)

